
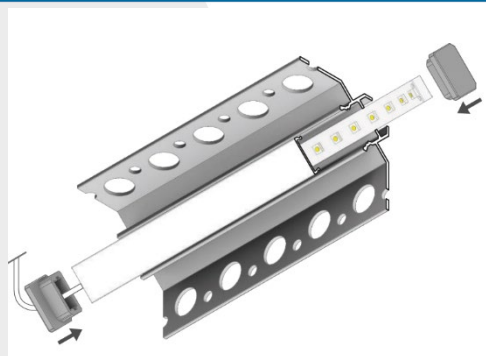


INSTALLATION GUIDE



Product Name: 90 DEGREE TILE-IN PROFILE

Product Code: K01-1300-2.4M

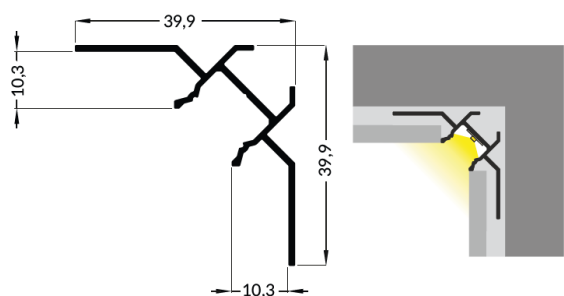



Product Name: 180 DEGREE TILE-IN PROFILE

Product Code: K01-1310-2.4M

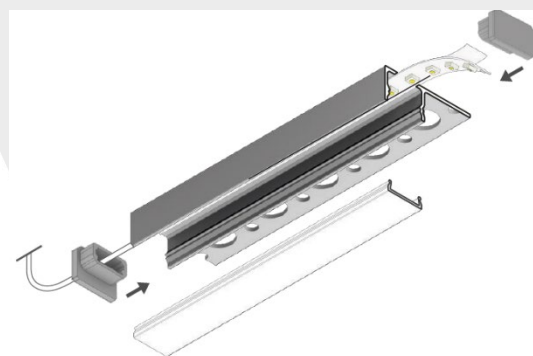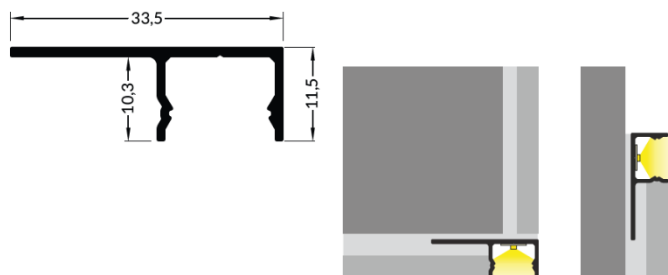

Product Name: 270 DEGREE TILE-IN PROFILE

Product Code: K01-1320-2.4M

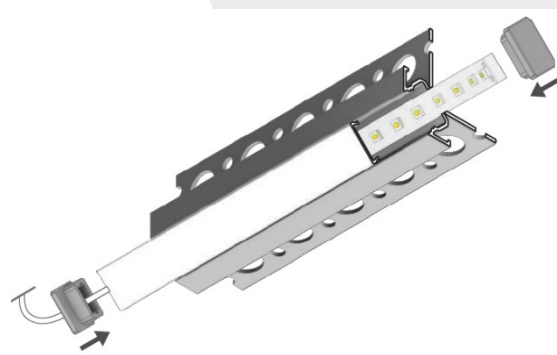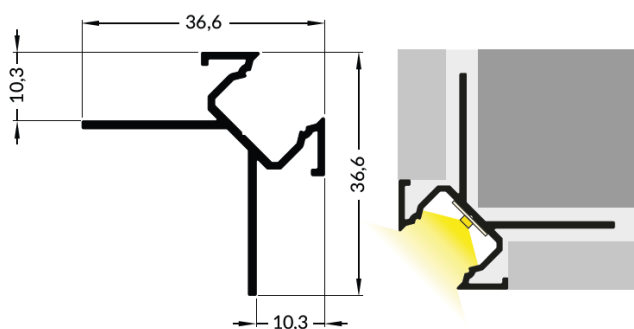


For further details, prices and/or to order contact


+44 (0)1302 741941 | sales@tlwglobal.com | tlwglobal.com

TLW Brunel House, Brunel Close, Harworth, Doncaster, South Yorkshire, DN11 8QA


Installation (Max 12mm wide tape)

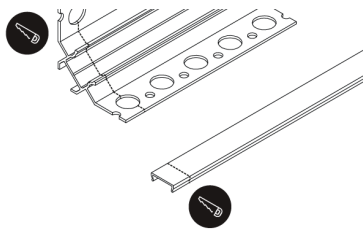


- 1** Cut the profile and diffuser to the correct length

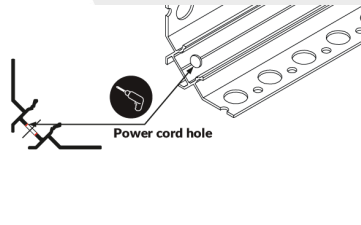


- 2** Drill a hole for the power cable at the back of the profile

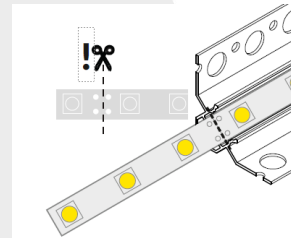


- 3** Cut the LED tape to size at the correct cutting points

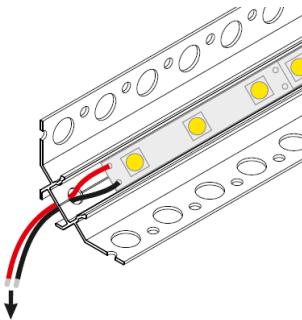

- 4** Clean the profile and attach the LED tape putting the wires through the hole.

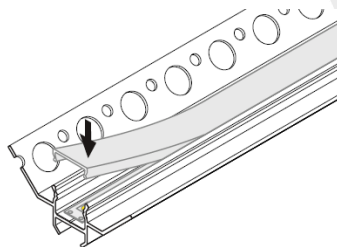


- 5** Click the cover into place

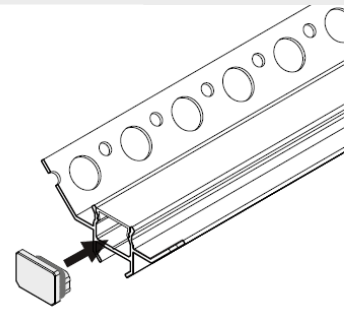


- 6** Attached the end caps at both ends

Mounting

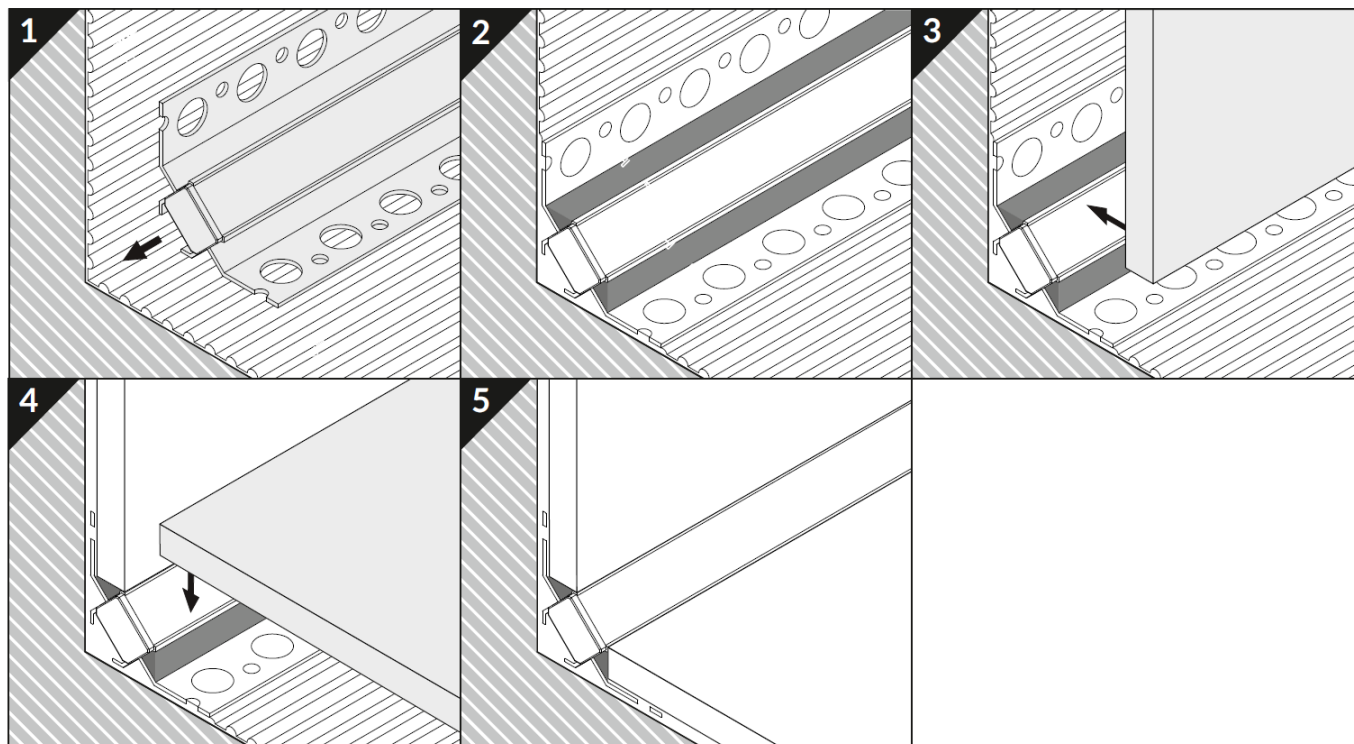

Power Supply

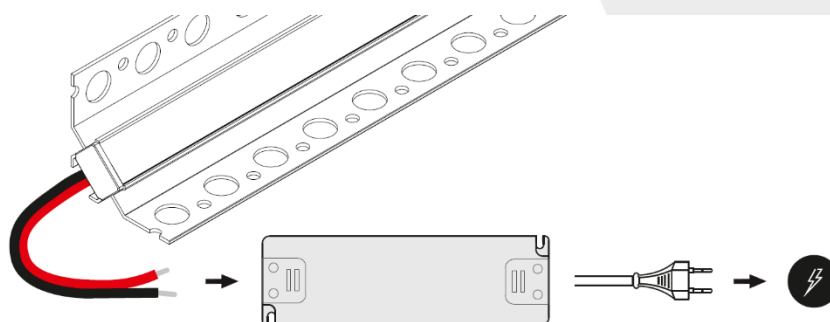

Important Safety Information

The installation should be carried out by a qualified electrician in compliance with the current edition of the IEE wiring regulations.